

## How to test video levels

cctvmate.com

## with the CCTVmate test monitor

- 1 Power up the CCTVmate test monitor and press the 'MODE' button until 'VIDEO' is highlighted in the top left corner of the LCD display.
- 2 Connect the video output of the camera to the yellow input BNC socket of the video lead and connect the camera to a power supply.
- 3 The video output value will be displayed as shown in the picture below.  
The normal output from a camera should read 1.0 V p-p or slightly higher. A reading below this would suggest a compromised signal, possibly due to signal drop over a long cable run or an issue with the composite source, both of which require further investigation.



### Please Note

These "Technical Tips" help sheets aim to answer commonly asked questions in a concise and informative manner - they are for advice & guidance only and do not replace any of the manuals or other literature supplied with our products.

Last edited:  
02/04/2014